

Bottom Channel Clear Partition Assembly Guide

Thank you for your business! Please carefully review the instructions below to ensure proper assembly.



3 Line up channel holes with holes on surface and screw down. Screw for panel facing the inside




1 Place the channel in desired location and mark drill holes with a pencil; repeat for 2nd and 3rd channels (when applicable)



4 Insert front panel centered in channels



2 Drill small guide holes where the pencil marks are

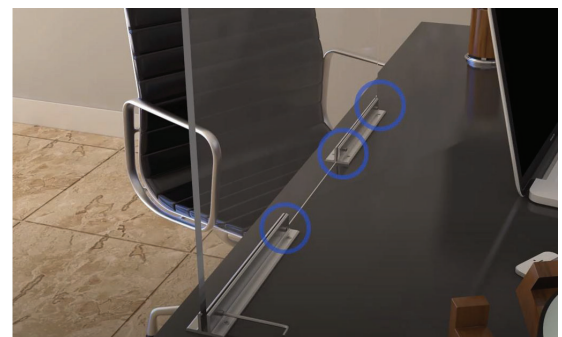

5 Using a screwdriver or Allen wrench, tighten screw on channel to secure front panel

Have Questions?
Contact us today!

978.712.0664 (0omg) | info@omghome.net | www.omghome.net

omg

optical • marketing • group